


Removal and installation of front right corner mmWave radar

Remove

1. Remove the front bumper assembly. Refer to [Removal and installation of front bumper assembly](#)
2. Remove the front right corner mmWave radar.
 - a. Disconnect 1 connector.
 - b. Remove 3 fixing screws and take out the front right corner mmWave radar.

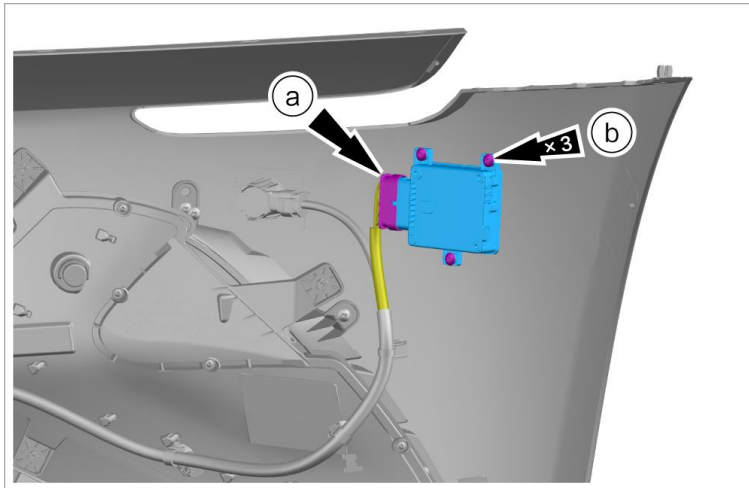

Install

1. Install it in the reverse order of removal.