


Removal and installation of right side mirror assembly

Remove

1. Remove the front right door shield assembly. Refer to [Removal and installation of front right door shield assembly](#)
2. Remove the front right door window frame shield assembly. Refer to [Removal and installation of front right door window frame shield assembly](#)
3. Disconnect 3 connectors from the right side mirror assembly.

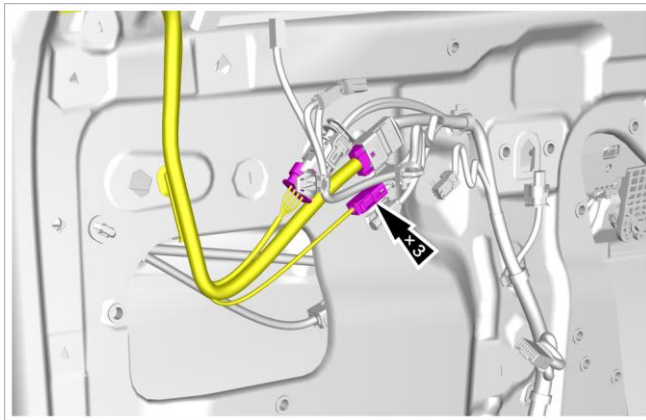


4. Remove the right side mirror assembly.
 - a. Detach 1 wiring harness clip.
 - b. Remove 1 fixing bolt.


Tightening torque: 9 N•m

- c. Remove 2 fixing nuts.

Tightening torque: 9 N•m

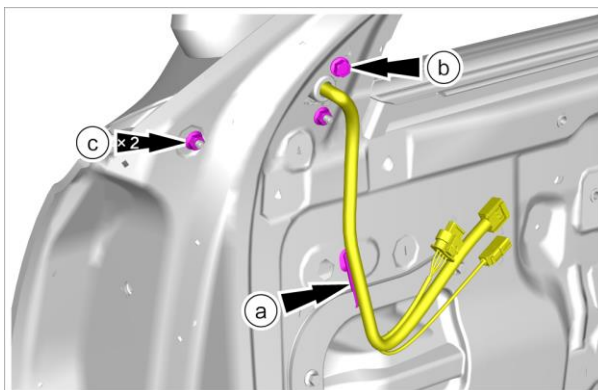

- 5.
6. Take out the right side mirror assembly.

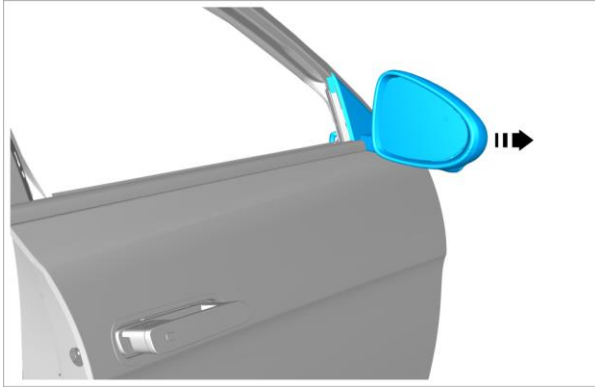

Install

1. Install it in the reverse order of removal.