


Removal and installation of front mmWave radar

Remove [3D animation demonstration](#)

1. Remove the front bumper assembly. Refer to [Removal and installation of front bumper assembly](#)
2. Remove the front mmWave radar.
 - a. Disconnect 1 connector.
 - b. Unlock the ACC bracket lock catch.
 - c. Pry up the two clips and take out the front mmWave radar.

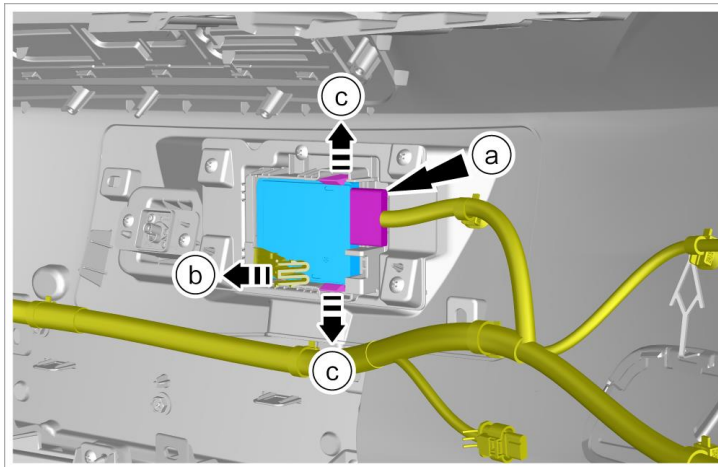

Install

1. Install it in the reverse order of removal.
2. After installation, use VDS to match the front mmWave radar of the vehicle.